 




PCMK 60% MECHANICAL KEYBOARD KEY GUIDE


60% ISO

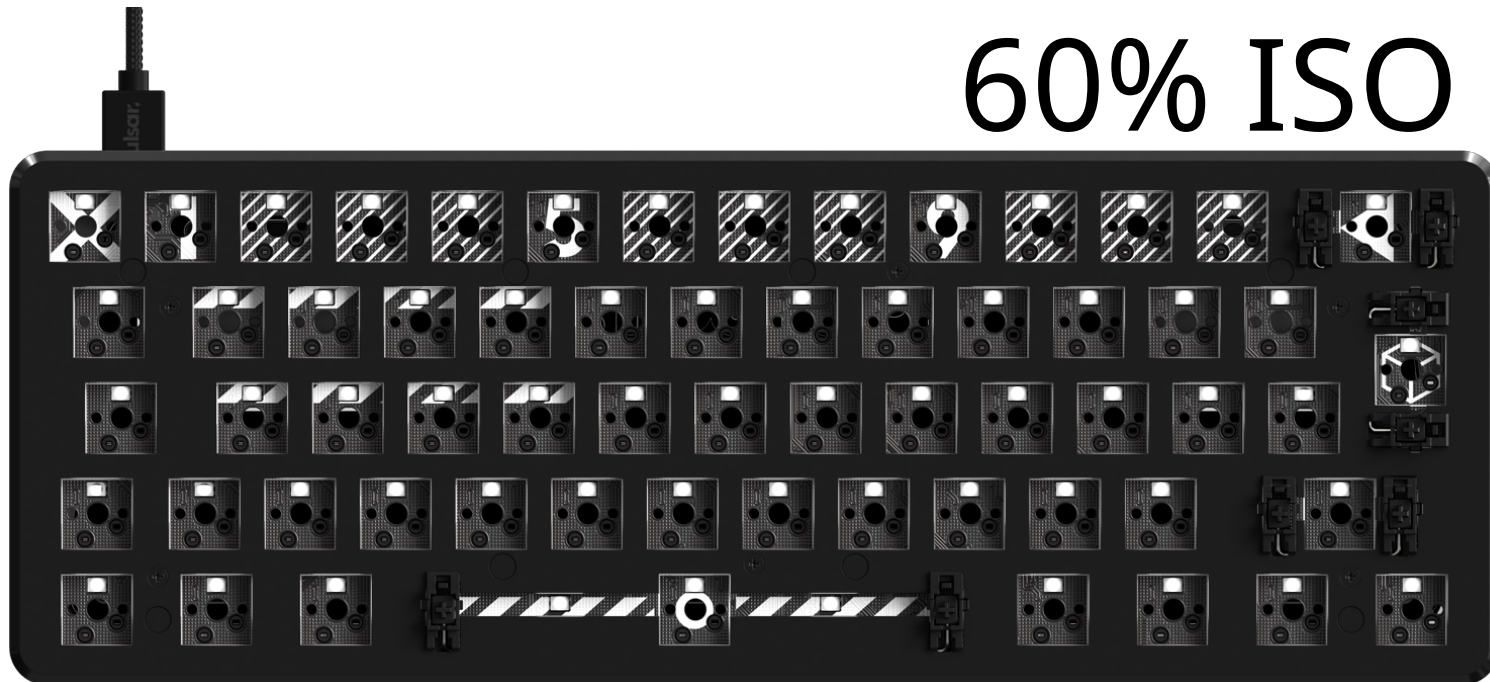




ENGLISH.....	3
한국어.....	5
日本語.....	7

 Press  + "Key"

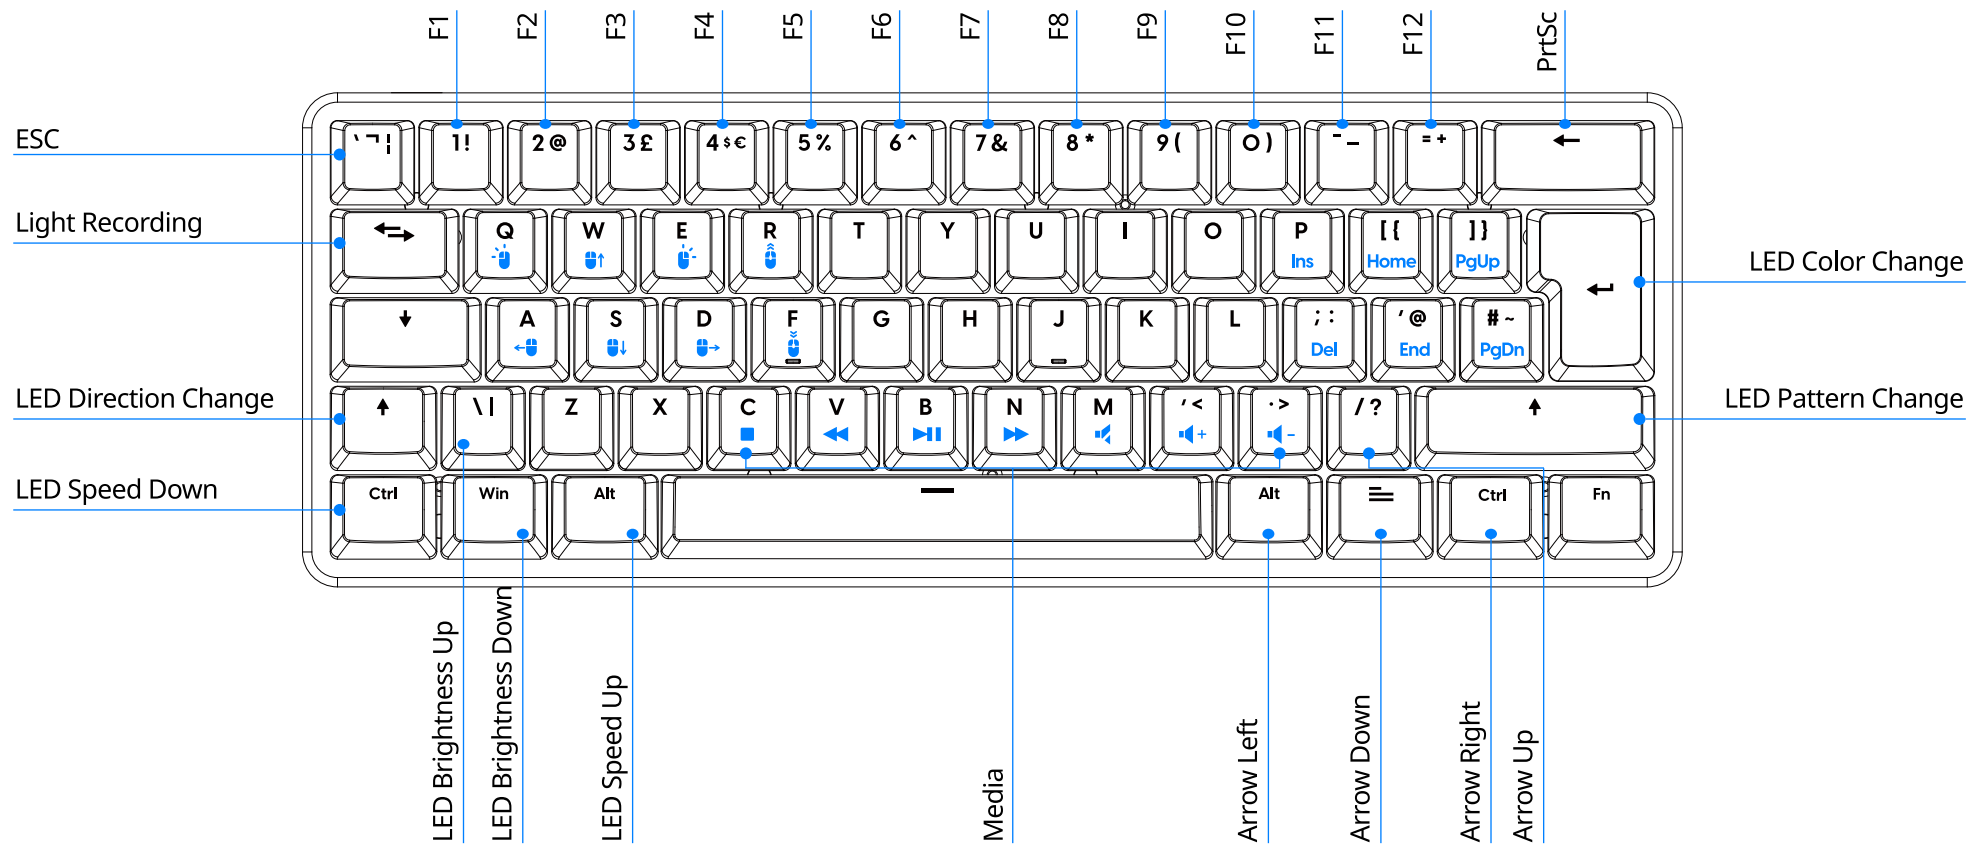


Reset (FN+  Press long)

 LED Control




LED direction change

 


LED pattern change



 
LED brightness down




LED color change

 


LED brightness up

 

LED speed up

 


LED speed down

 


LED light recording



 
ESC




F11

 

Move backward

 

Media rewind

 

F1



 
F12



Move right



Play/Pause



F2



 
PrtSc



Wheel scroll down



Media forward




F3




LED 1



 INS



Volume mute

 


F4




LED 2



 HOME




Volume Up

 


F5



 
Mouse left click



PgUp

 

Volume Down

 

F6



 
Mouse forward



Del



Arrow up



F7



Mouse right click



End



Arrow left



F8



Wheel scroll up



PgDn



Arrow down



F9



Move left



Stop

 


Arrow right




F10

Press  + "Key"

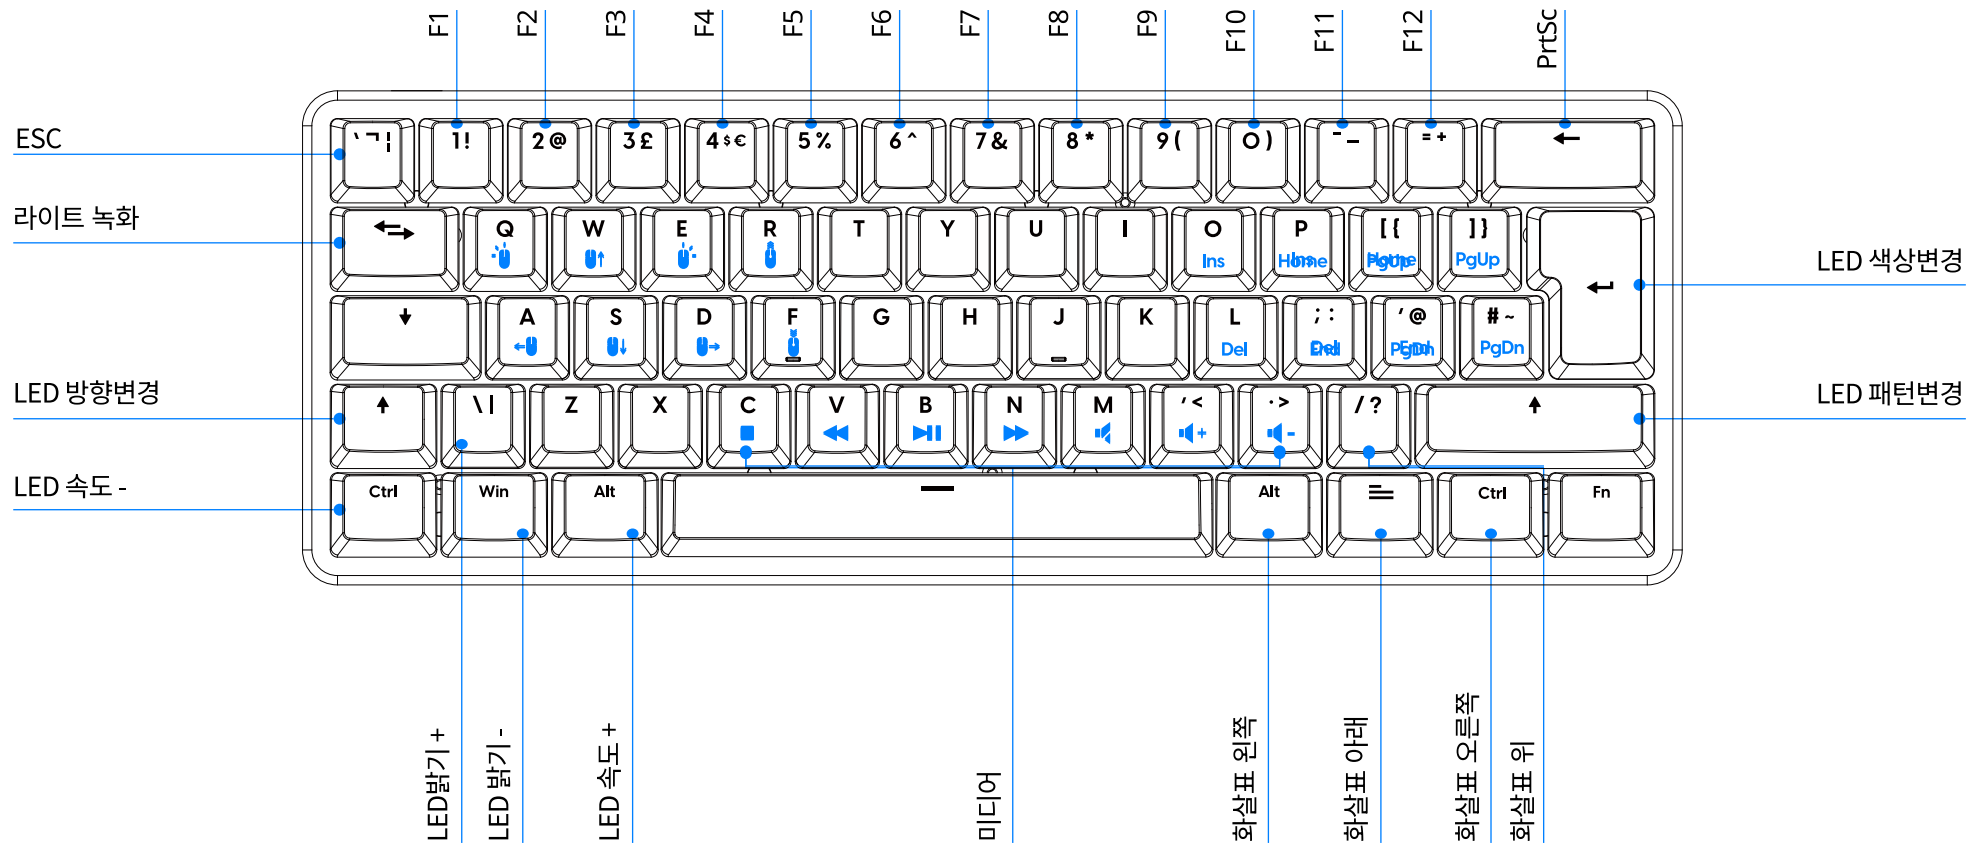


리셋 (FN+ )를 길게 눌러 주십시오)

 
LED 컨트롤




LED 방향변경

 


LED 색상변경

 

LED 패턴변경

 


LED 밝기 +

 


LED 스피드 -



 
LED 밝기 -




LED 스피드 +

 


LED 라이트 녹화

 

ESC

 


F11

 


뒤로 이동



 
이전 트랙




F1

 


F12

 


오른쪽으로 이동

 


재생 / 일시정지

 

F2

 


PrtSc

 

스크롤다운



 
다음 트랙



F3



 LED 1



INS



음소거




F4




LED 2



 HOME



볼륨 +

 


F5




마우스 왼쪽 클릭



 PgUp



볼륨 -

 

F6



 
앞으로 이동



Del




화살표 위




F7



 
마우스 오른쪽 클릭



End

 

화살표 왼쪽

 

F8



 
스크롤업



PgDn



화살표 아래



F9



왼쪽으로 이동



정지



 
화살표 오른쪽



F10


*오른쪽 Ctrl

Press  + "Key"

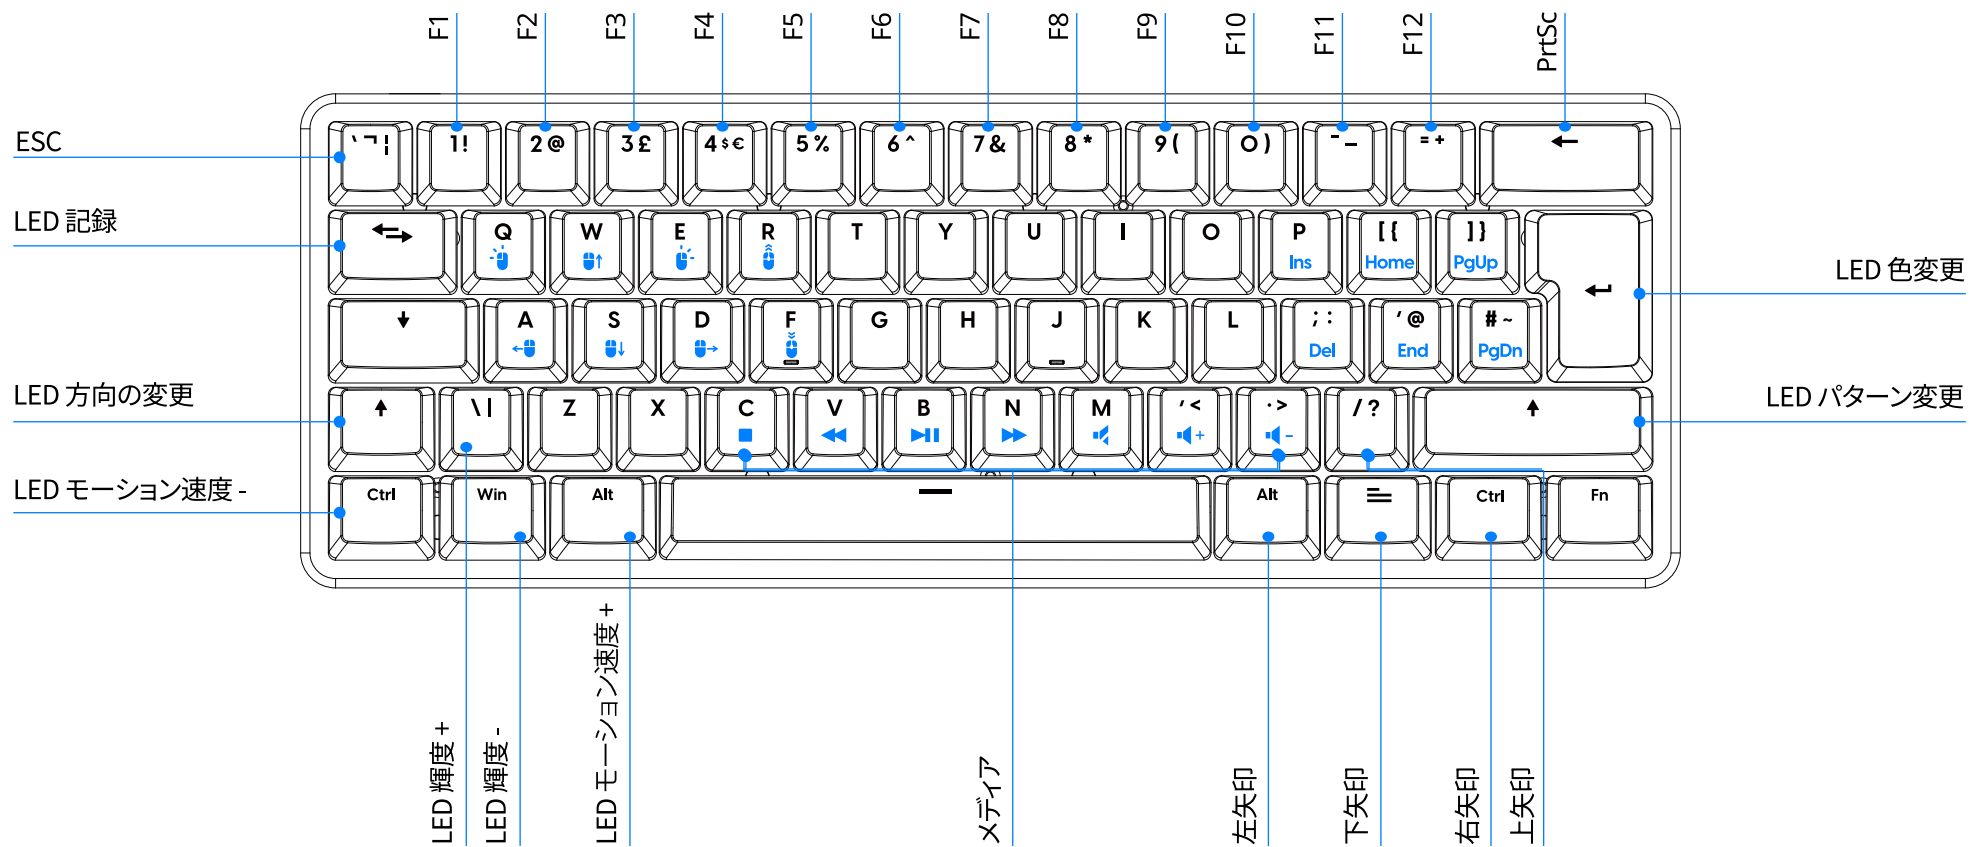


リセット (FN+)を押し続けてください

 LED コントロール




LED 方向の変更

 


LED 色変更



 
LED パターン変更



LED 輝度 +

 


LED モーション速度 -

 


LED 輝度 -



 
LED モーション速度 +




LED 記録

 


ESC

 

F11

 

戻る

 


前のトラック




F1



 F12



右に移動

 


再生/一時停止




F2



 PrtSc



スクロールダウン

 

次のトラック



F3




LED 1



INS



 ミュート




F4




LED 2



 HOME



ボリューム +

 


F5



マウスの左クリック



 PgUp



ボリューム -



 
F6




前方に移動



Del



上矢印

 


F7




マウスの右クリック



 End



左矢印

 

F8



 
スクロール上



PgDn




下矢印




F9



 左に移動



停止

 

右矢印



F10

NEED ANY HELP?

Thanks for choosing Pulsar.
If you have any questions or comments,
please do not hesitate to contact us.

US/International: support@pulsar.gg
대한민국: support@pulsargg.kr
日本: support@pulsargg.jp